

SyncBee Enclosure Installation Instructions

- 1) Download: <http://www.farstone.com.tw/download/syncbee/SyncBee.zip>
- 2) Extract the **AsmCloneImg** software and **SyncBee ISO** file from SyncBee.zip
- 3) Place a SATA 2.5" inch HDD in the SyncBee enclosure
 - a. Must be at most 10 mm in height (2 platter HDD)
- 4) Plug the SyncBee unit into computer
- 5) Open **AsmCloneImg.exe**
- 6) Click **Set Data Path** and select the **SyncBee ISO** file
- 7) Click **Open**
- 8) Click **Write to Disk**
- 9) After it has finished loading the SyncBee software, it may try to run automatically. Go ahead and cancel it so it does not run.
- 10) Open **Disk Management** in Windows
 - a. Windows XP: Click **Start**, click **Run**, type **compmgmt.msc**, and then click **OK**. In the menu, select **Disk Management**.
 - b. Windows 7 / Vista: Click **Start**, type **compmgmt.msc** in the search bar then hit enter.
- 11) In **Disk Management**, initialize the SyncBee hard drive. This can be done by right-clicking the corresponding drive (Drive 1, Drive 2, etc.) and selecting **Initialize Disk**.
- 12) After it has been initialized, right click the area where it says **Unallocated Space** and select **New Simple Volume**.
- 13) Assign it a drive letter and format it.
- 14) SyncBee will now be functional.